

Billet Underbody Tunnel Braces

MQB / MQB EVO / MQB-A0

VWR810004 & 5

FITTING INSTRUCTIONS



WHAT'S IN THE KIT?


- ▷ 1 x Rear Tunnel Brace (All MQB & MQB-A0 Vehicles)
- ▷ 1 x Centre Tunnel Brace (FWD MQB Vehicles)

REQUIRED TOOLS AND PARTS

- ▷ 13mm Socket & Ratchet/Wrench

FITTING NOTES

- ▷ Please ensure that the orientation of these components is correct.
- ▷ VWR810004 (Centre Tunnel Brace)
 - Component fits FWD MQB vehicles only
- ▷ VWR810005 (Rear Tunnel Brace)
 - Component fits all MQB & MQB-A0 vehicles

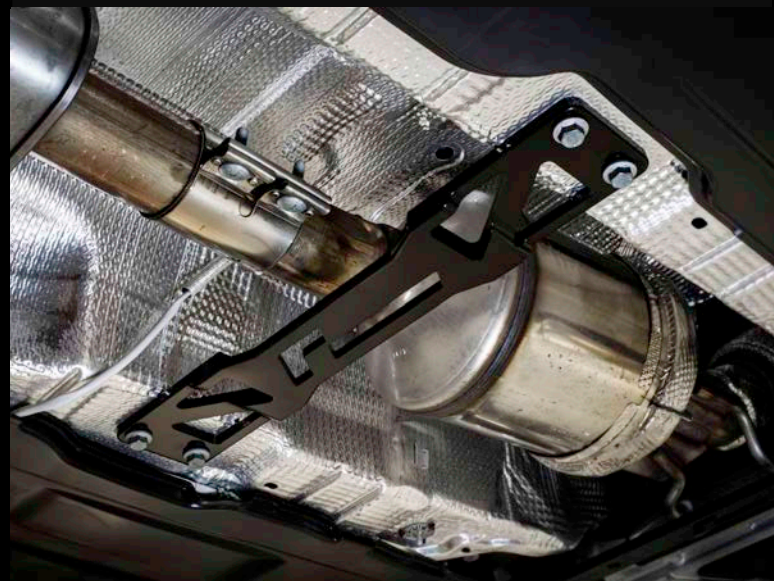

Tunnel Chassis Brace Application List

VWR810004 (Centre Tunnel Brace) – Component fits Front Wheel Drive (FWD) MQB vehicles only, please follow Step 1 for installation method.



VWR810005 (Rear Tunnel Brace) – Component fits both FWD and All Wheel Drive (AWD) MQB & MQB-A0 vehicles, please follow Step 2 for installation method.

Step 1:

Installation of VWR810004 (Centre Tunnel Brace) – Component fits FWD MQB vehicles only:

From under the vehicle loosen and remove 4 x M8 OEM bolts. Once all 4 bolts are removed the OEM brace can be removed and put aside.

Offer the RacingLine Centre Tunnel Brace up to the vehicle, ensure the orientation is correct, use figure 1 for reference. Once in place, insert 4 x M8 OEM bolts and torque to 30Nm.

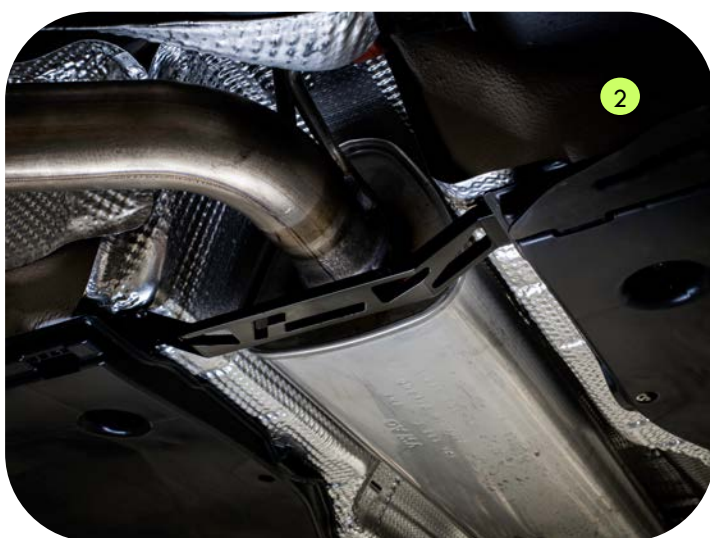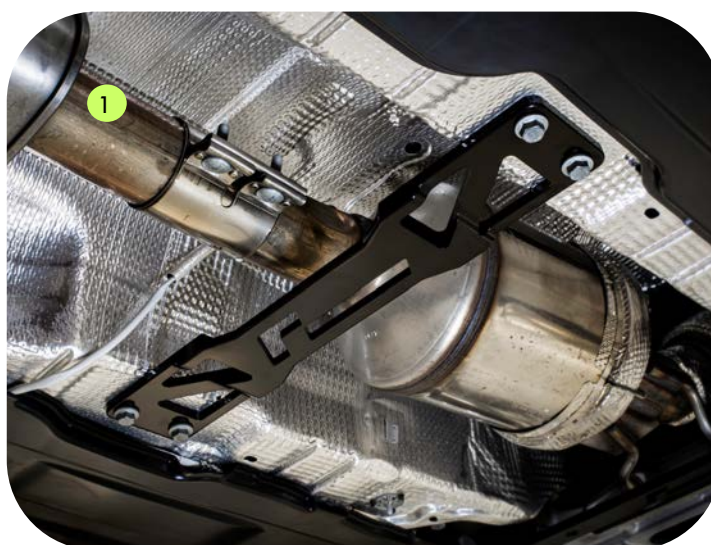

Step 2:

Installation of VWR810005 (Rear Tunnel Brace) – Component fits all MQB & MQB-A0 vehicles:

From under the vehicle loosen and remove 4 x M8 OEM nuts. Once all 4 bolts are removed the OEM brace can be removed and put aside.

Offer the RacingLine Centre Tunnel Brace up to the vehicle, ensure the orientation is correct, use figure 2 for reference. Once in place insert 4 x M8 OEM nuts and torque to 30Nm.